Troubleshooting Guide:

Problem	Cause	Solution
1. No discharge	a. No water b. Excessive water pressure c. Eductor clogged	a. Open water supply b. Install regulator if pressure exceeds 85 PSI c. Clean* or replace
2. No concentrate draw	 a. Clogged check valve b. Metering tip clogged c. Eductor clogged d. Clogged water inlet e. Clogged foot strainer f. Low water pressure and/or volume g. Concentrate container empty h. Check valve not screwed into eductor firmly 	 a. Clean or replace b. Rinse in hot water or replace: DO NOT REAM CLEAN! c. Clean or replace d. Clean screen e. Clean or replace f. Minimum 25 PSI and 4 GPM flow required to operate unit g. Replace with full container h. Tighten, but DO NOT OVER TIGHTEN!
3. Excess concentrate draw	a. Metering tip not in place (Or wrong metering tip)	a. Press correct tip firmly into barb
4. Water flow won't shut off	a. Ball valve defective	a. Replace
5. Leaks at plastic tube	a. Compression nut loose	a. Tighten nut 1/2 turn
6. Low or no water flow	a. Inlet screen cloggedb. Supply source inadequatec. Scaled eductor or fittings	 a. Clean or replace b. 4 GPM flow necessary to unit. Move unit or replumb incoming line. c. Clean* or replace
7. Backflow into concentrate	a. Eductor check valve inoperable	a. Clean or replace check valve

* In hard water areas, scale (mineral deposits) may form at the discharge of the eductor. This scale may be removed by soaking the eductor in a descaling (deliming) solution or by running the descalant through the system. When removing an eductor for soaking, firmly grasp the eductor and unthread the adapters located above and below the eductor. Replace in the same manner.



Hydro Systems 3798 Round Bottom Road, Cincinnati, OH 45244 Phone: (513) 271-8800 Fax: (513) 271-0160 10084409 Rev. C 5/15



HydroChem 919 **Multifunction Proportioning and Dispensing System**

Wall mounted, high volume washing, foaming and/or sanitizing proportioner with two product eductors.

HANK YOU FOR YO					
Hydro Systems manufactures quality proportioning an					
ons. NO					
protective clothing and eyewear					
observe safety and handling ins					
direct discharge away from you					
dispense cleaners and chemica					
when maintaining your equipme					
equipment after each use in acc					
protective clothing and eyewear					
ment or changing metering tips					
re-assemble equipment accord					
or latched into position.					
only to tap water outlets (85 PS					

Package includes:

- -- complete unit mounted on stainless steel front plate
- -- (2) 7-foot vinyl product suction tubes with foot strainers
- -- (1) metering tip kit
- -- (4) screws and (4) wall anchors for wall mounting (use 9/32" drill)
- -- parts list and product structure diagram

Instructions for Operation:

- 1. Attach unit to wall using hardware provided.
- directly into the concentrate container.
- leaking.

- in use at a time.

Metering Tip Selection:

The final concentration of the dispensed solution is related to the size of the metering tip orifice, the viscosity of the liquid being siphoned, water pressure, water flow rate, and other factors in the application. A chart is provided on the next page which can be used as a guideline for selecting a metering tip when proportioning water-thin concentrates. Test the actually achieved dilution using the Measurement of Concentration procedure discussed on the next page. If product viscosity is greater than that of water, choose a tip with a larger orifice than that which would deliver the desired water-to-product ratio for a water-thin product. Test the actually achieved ratio using the Measurement of Concentration procedure on the next page. Continue to choose and test tips until the desired dilution is achieved. One clear, undrilled tip is supplied to permit drilling orifice sizes not listed if necessary.

OUR INTEREST IN OUR PRODUCTS

nd dispensing equipment. Please use this equipment carefully and observe

ar when dispensing chemicals or other materials.

structions of the chemical manufacturers.

ou or other persons or into approved containers.

als in accordance with manufacturer's instructions. Exercise **CAUTION** nent.

ccordance with instruction sheet.

ar when working in the vicinity of all chemicals, filling or emptying equip-

ding to instruction procedures. Be sure all components are firmly screwed

SI maximum)

2. Select metering tip (see section on metering tip selection) and press firmly into hose barb provided at the side of the eductor. Install product suction tube on hose barb. The strainer end of the suction tube can be dropped

3. Connect water inlet hose with 3/4" male garden thread to female swivel at top left side of unit. Tighten to avoid

4. Connect discharge hose to male 3/4" discharge provided at bottom of unit. Hose of 1/2" ID is recommended if the hose length will be 50 feet or less. Use 3/4" ID hose if the total length of the hose will exceed 50 feet. 5. Turn on water supply to unit. Minimum 25 PSI water pressure is required to operate the unit.

6. Turn on product valve to begin proportioning and dispensing. Shut off the valve and turn on rinse (bottom) lever for full volume rinse. Note: You may only use either one product or the rinse feature - only one valve may be

APPROXIMATE DILUTIONS AT 40 PSI FOR WATER-THIN PRODUCTS (1.0 CP)						
Tip Color	Orifice Size	/Std. Drill Number)	Ratio			
No Tip	.187	(3/16)	10:1			
Gray	.128	(30)	10:1			
Black	.098	(40)	10:1			
Beige	.070	(50)	12:1			
Red	.052	(55)	16:1			
White	.043	(57)	24:1			
Blue	.040	(60)	28:1			
Tan	.035	(65)	32:1			
Green	.028	(70)	48:1			
Orange	.025	(72)	64:1			
Brown	.023	(74)	80:1			
Yellow	.020	(76)	96:1			
Aqua	.018	(77)	128:1			
Purple	.014	(79)	256:1			
Pink	.010	(87)	384:1			
Lt. Purple	.009	(89)	512:1			


CONVERSION CHART: Ratio Equivalents to Standard Measures				
Oz./Gal.	Ratio	%		
128	1:1	50.0		
64	2:1	33.3		
32	4:1	20.0		
21	6:1	14.3		
16	8:1	11.1		
14	9:1	10.0		
8	16:1	5.9		
6	24:1	4.0		
4	32:1	3.0		
3	48:1	2.0		
2	64:1	1.5		
1	128:1	0.8		
1/2	256:1	0.4		

512:1

0.2

1/4

HydroChem Parts Diagram:

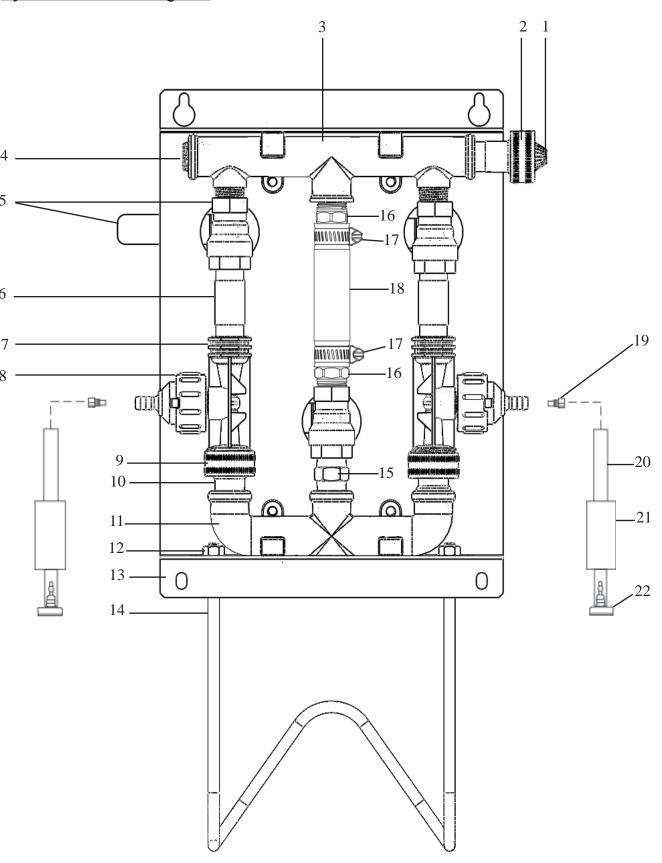

Measurement of Concentration:

You can determine the dispensed water-to-product ratio for any metering tip size and product viscosity. All that is required is to operate the primed dispenser for a minute or so and note two things: the amount of dispensed water/product mixture, and the amount of concentrate used in preparation of the solution dispensed. The wawater/product mixture, and the amount of concentrate as follows: ter-to-product ratio is then calculated as follows: Dilution (X) = <u>Amount of Mixed Solution -- Amount of Concentrate Drawn</u> Amount of Concentrate Drawn

Dilution ratio, then, equals X parts water to one part concentrate (X:1). If the test does not yield the desired ratio, choose a different tip and repeat the test. Alternative methods to this test are 1) pH (using litmus paper), and 2) titration. Contact your concentrate supplier for further information on these alternative methods and the materials required to perform them.

PARTS LIST (Refer to diagram)

Key #	Part Number	Description	Key #	Part Number	Description	
1	238100	Strainer washer	16	326001	Hose barb, 3/8"NPT x 1/2" barb	
2	2767-K	Connector swivel	17	608300	Hose clamp	
3	10091700	Brass top manifold	18	90087108	Hose, 1/2"ID x 2.88"	
4	10075925	Pipe plug	19	10027209	Metering tip kit	
5	10084020	Ball valve (includes a)	20	500814	Suction tube	
а	10088100	Yellow handle sleeve	21	509900	Ceramic weight	
6	10067810	Pipe nipple	22	609600	Foot strainer	
7	440800	3.5 GPM eductor				
8	10069270	Check valve - Viton*	*EPD	*EPDM check valve available: order 10069271		
9	506502	Swivel nut				
10	276800	Swivel stem, short				
11	10091710	Brass bottom manifold				
12	10005803	Nut				
13	10091720	Cover				
14	605400	Hose hanger				
15	10084701	Hex nipple				